 


Specifications

Power-output	Rated: 10W Maximum: 16W
Power consumption	Below 16W (at rated output)
Effective distance	Approx. 250m
Power source	SUM-2 (size C or R-14) dry cell batteries: 6pcs.
Power duration	Approx. 6 hours
Microphone	Anti-howling, dynamic type microphone (Combined to the main body)
Horn diameter	200mm
Total length	340mm
Weight	Approx 1.3kg (without batteries)

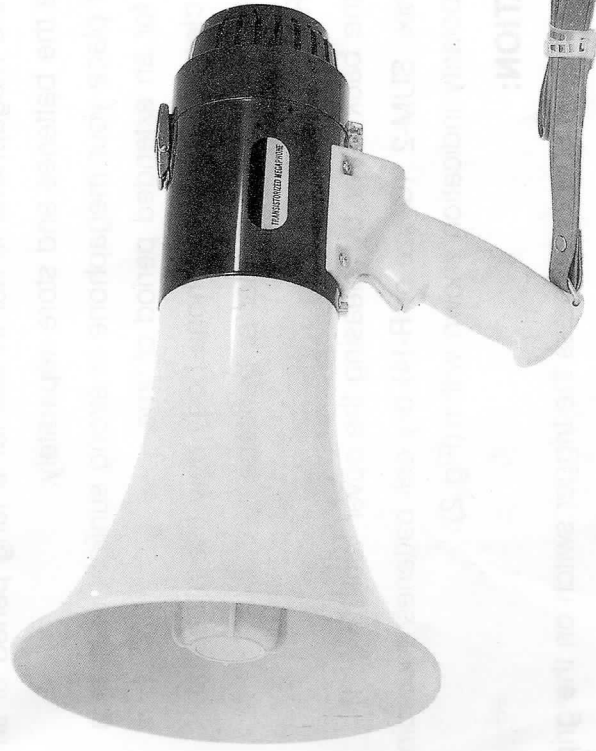

MEGAPHONE

INSTRUCTION MANUAL

DIRECTIONS FOR USE:

- Amplified sound or howling may cause damage to person's ears. Do not use this megaphone near the person's ears.
- When the megaphone is not in use for a long period of time remove the batteries and store separately.
- Do not place your megaphone in strong sunlight or near a heater for an extended period of time.
- When cleaning the megaphone body only use a neutral detergent. Never use thinner or benzene.

BATTERY INSERTION:

- Open the back cover by releasing the cover latch (Fig. 1).
- Place six SUM-2 (C-size or R-14) dry cell batteries according to the polarity indication shown within (Fig 2).

OPERATION:

- To activate the megaphone press the trigger switch on the grip.
- When using your megaphone place your lips as close as possible to the mouth piece. Adjust the volume control to a range where there is no howling feedback when in use. (Fig. 3)
- For the model is equipped with a siren switch which is located above the megaphone trigger switch. By pressing this switch you will receive a continuous siren affect. By pressing the "siren" switch once more then will cut off the siren sound.
- For the model is equipped with a whistle switch which is located above the megaphone trigger switch. By pressing this switch you will receive a continuous whistle sound as long as this button is pressed.

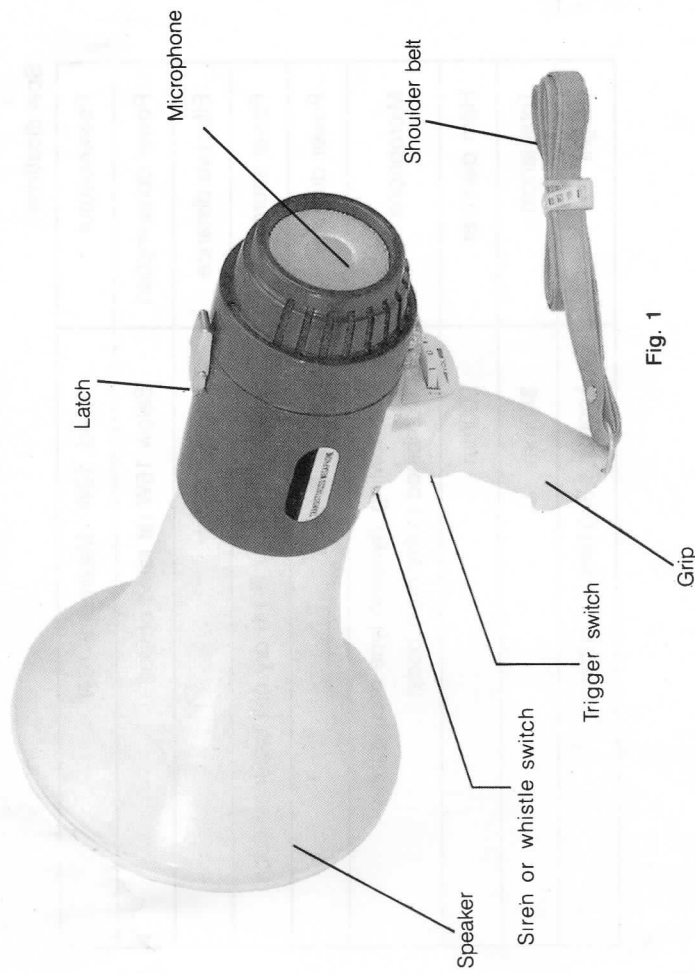


Fig. 1

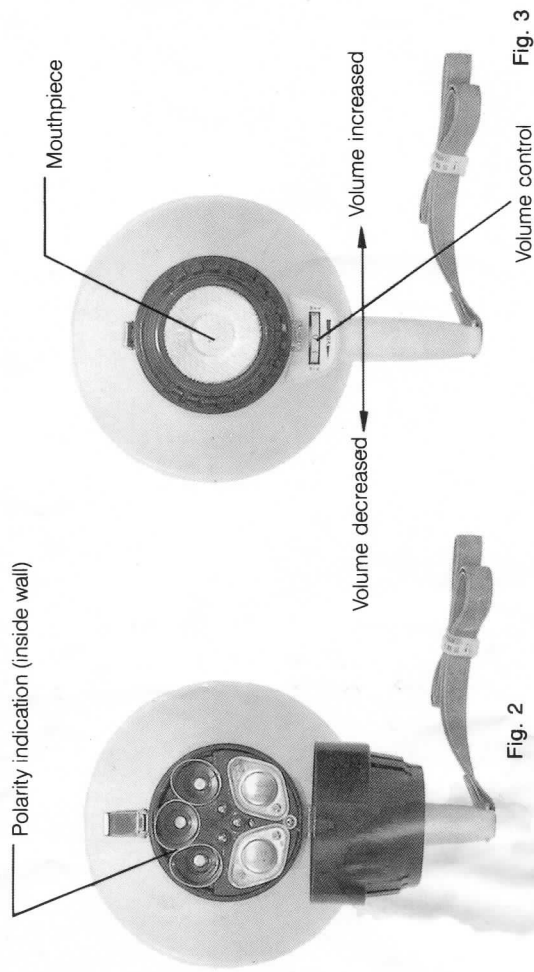


Fig. 2

Fig. 3